
Using The Framon Spacing Clip

Note: Prior to 1999, Framon offered two spacing clips; one for standard keys and a special clip for Kaba Peaks. This information pertains to the older "Peaks" spacing clip as well as the newer, all-in-one version.

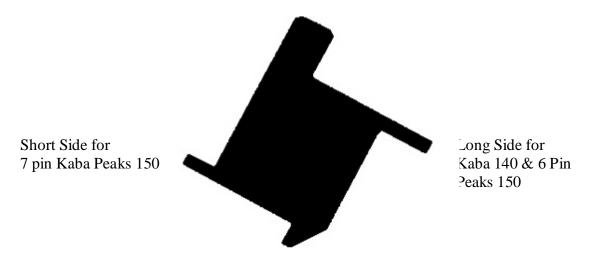

The spacing clip is held against the left side of the vise while the blank is inserted from the right. When the notch in the blank makes contact with the tip of the clip, tighten the vise clamp nut to secure the key and remove the clip.

For all Kaba keys, use a starting cut position of .050.